



Skate Kastle Aluminum Bash Guards

Installation Instructions –

If you have a Version 3 (V3) board or if you have a Version 2 (V2) that came with the extended battery or have already installed the extended risers these will be a perfect fit, just swap out the risers with the guards.

If you haven't installed the extended risers yet you will need to use the hardware that came with the risers. If you have a V1 or didn't get the extended battery you will need to use or purchase the 1.5" truck mounting bolts from skatekastle.com *Doesn't fit Boosted Mini






Install lingo –

Risers: Riser pads are the plastic pads that are inserted between the truck and Boosted Board deck.

Trucks: Refer to the baseplate of the skateboard truck attaching the wheels to the Boosted Board deck.

Guards: Skate Kastle's Bash Guards.

Bolts - Each truck requires four bolts and locknuts.

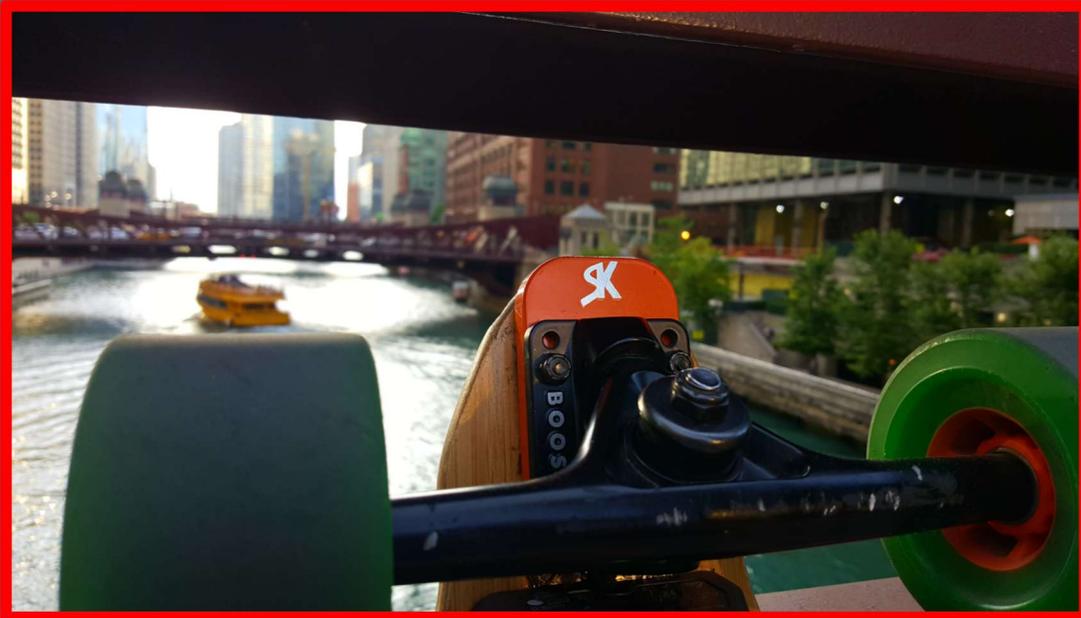

These are not a personal safety device.

We make no guarantee that these will protect your board or yourself from injury.

Always wear a helmet when riding your Boosted Board, ride safe and enjoy!

For questions, concerns and compliments, please email

customersupport@skatekastle.com